


THE BEST COLLECTOR


PERIMETER TRACK :

24 gauge
"Paint-lock"

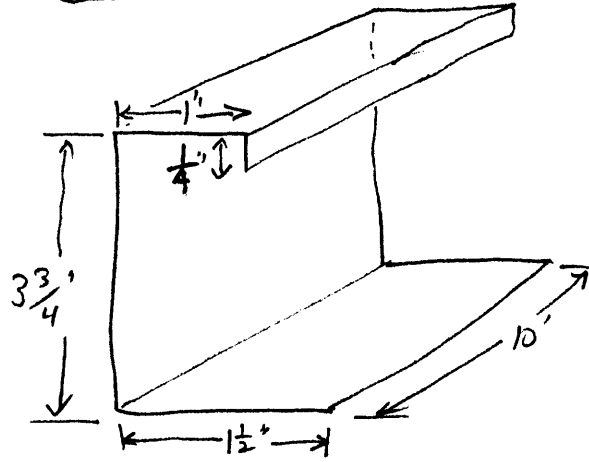


BAFFLE TRACK :

24 Gauge
Paint-lock

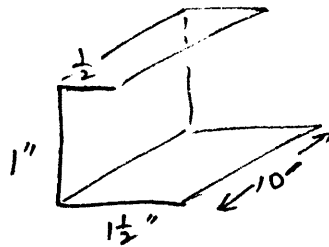


Glass Supports (a channel)

20 Gauge
Paint-Lock

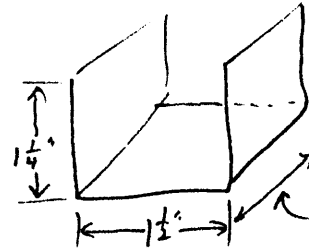

77" for 76" glass
OR AS NEEDED

ABSORBER JOINTS

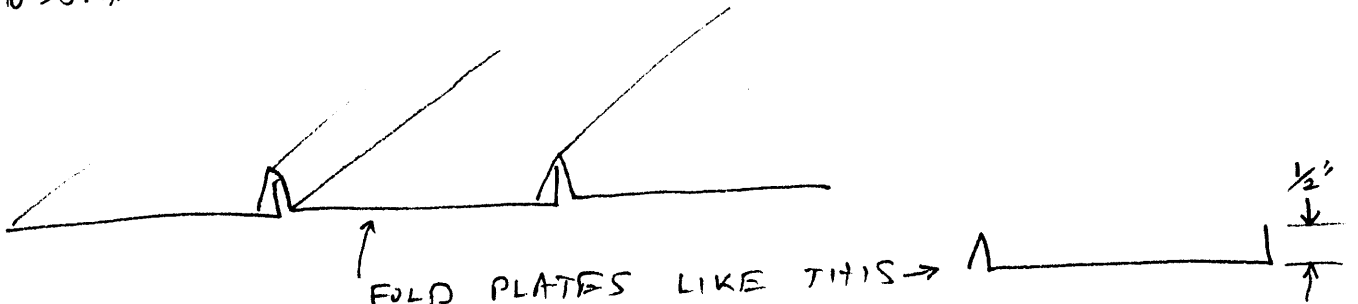

FOLD PLATES LIKE THIS →
ON BRAKE
FILL GROOVE WITH SILICONE,
PUT ONTO PREVIOUSLY INSTALLED PIECE, CRIMP
GROOVE CLOSED, & SCREW TO BAFFLES

BAFFLING HINT: INSTALL BAFFLE TRACK ALL THE WAY AROUND THE INSIDE OF THE PERIMETER OF THE COLLECTOR (AFTER DUCTBOARD), SO THAT ABSORBER EDGES NEED NOT BE FOLDED, BUT MAY BE INSTALLED FLAT & SCREWED AT EDGES.